


IMPORTANT

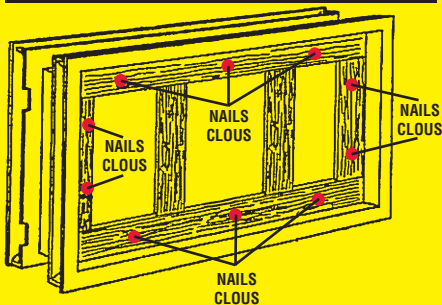

ATTENTION

Frame installation instruction

- 1) Do not remove bracing until you're ready to put the inserts in.
- 2) Install in forms at desired location.
Take the **level** on the **top** and on the **side**.
- 3) Secure in place the outside by nailing through forms into wooden window braces. (2-1/2 inches nails) 2 nails each verticals and 3 nails on top and bottom spaced evenly (see illustration).
- 4) **Repeat Procedure #3 for the inside.**

Méthode d'installation

- 1) N'enlever le cadrage de bois que lorsque les vitres thermos seront prêtes à être installées.
- 2) Installer dans les formes en prenant soin que le châssis soit au **niveau** sur la **tête** et les **côtés**.
- 3) Clouer en place dans la cadrage de bois côté extérieur du châssis avec des clous de 2-1/2 pouces, 2 clous dans chacun des côtés verticaux et 3 clous dans chacun des côtés horizontaux (voir illustration)
- 4) **Répéter l'opération #3 pour côté intérieur.**